

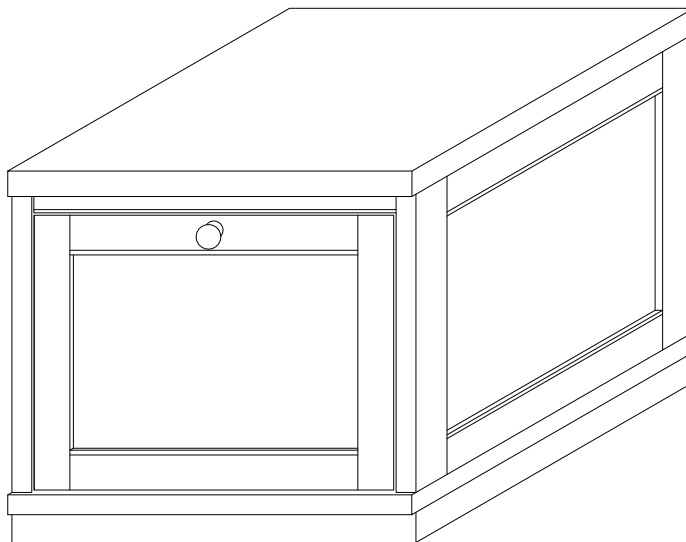
# HOME DECORATORS C O L L E C T I O N

BF-25169 MARTHA STEWART LIVING MUDROOM BASE WITH DEEP DRAWER  
19"Hx20"Wx16"D

INV#19143

## ASSEMBLY INSTRUCTIONS


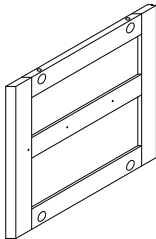
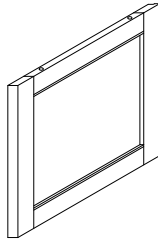


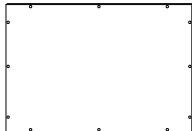
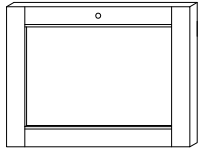
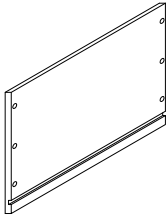
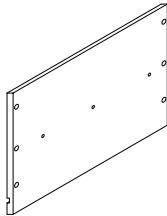



Made In China















Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.



## PARTS LIST
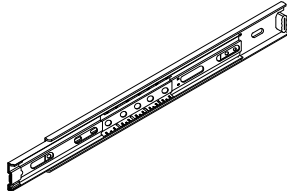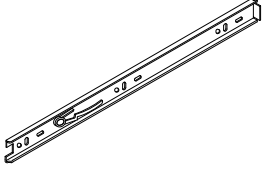
|   |  |   |
|---|--|---|
| <b>A</b><br><br>TOP PANEL-1PC            | <b>B</b><br><br>LEFT SIDE PANEL-1PC             | <b>C</b><br><br>RIGHT SIDE PANEL-1PC             |
| <b>D</b><br><br>BOTTOM PANEL-1PC       | <b>E</b><br><br>ADORNING PANEL-1PC            | <b>F</b><br><br>BACK PANEL-1PC                 |
| <b>G</b><br><br>DRAWER PANEL FRONT-1PC | <b>H</b><br><br>LEFT<br>DRAWER PANEL SIDE-1PC | <b>I</b><br><br>RIGHT<br>DRAWER PANEL SIDE-1PC |
| <b>J</b><br><br>DRAWER PANEL BACK-1PC  | <b>K</b><br><br>DRAWER PANEL BOTTOM-1PC       | <b>L</b><br><br>CAM-TOOL-1PC                   |

|   |   |  |
|---|---|--|
| <b>M</b> <br>CAM-BOLTS-8PCS          | <b>N</b> <br>CAM-LOCKS-8PCS              | <b>O</b> 7mm × 5/8"<br><br>SCREWS-12PCS |
| <b>P</b> 8mm × 1"<br><br>SCREWS-2PCS | <b>Q</b> 6mm × 1"<br><br>SCREWS-12PCS    | <b>R</b> <br>OUTER SLIDERS-2PCS         |
| <b>S</b> <br>INNER SLIDES-2PCS       | <b>T</b> 6mm × 1/2"<br><br>SCREWS-12PCS  | <b>U</b> 8mm × 5/8"<br><br>SCREW-1PC    |
| <b>V</b> <br>KNOB-1PC              | <b>W</b> 7mm × 5/8"<br><br>SCREWS-8PCS | <b>X</b> <br>PLATES-2PCS              |
|   |   |  |
|   |   |  |




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

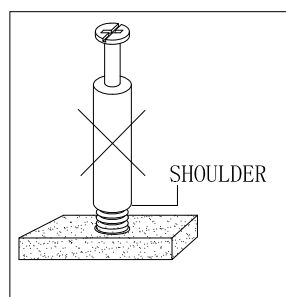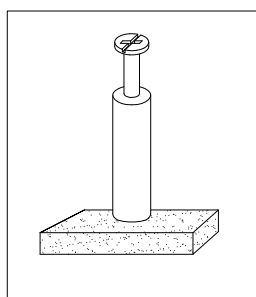NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.




NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

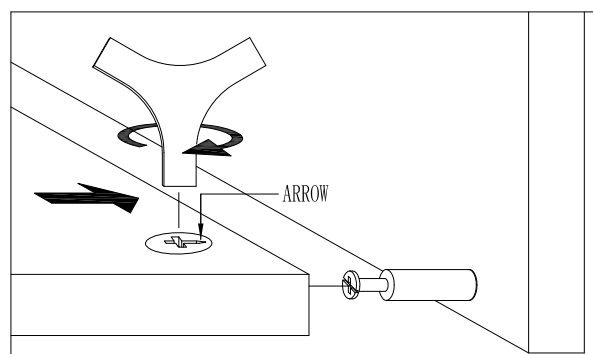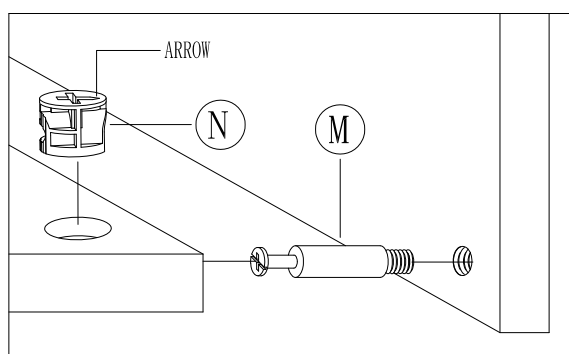


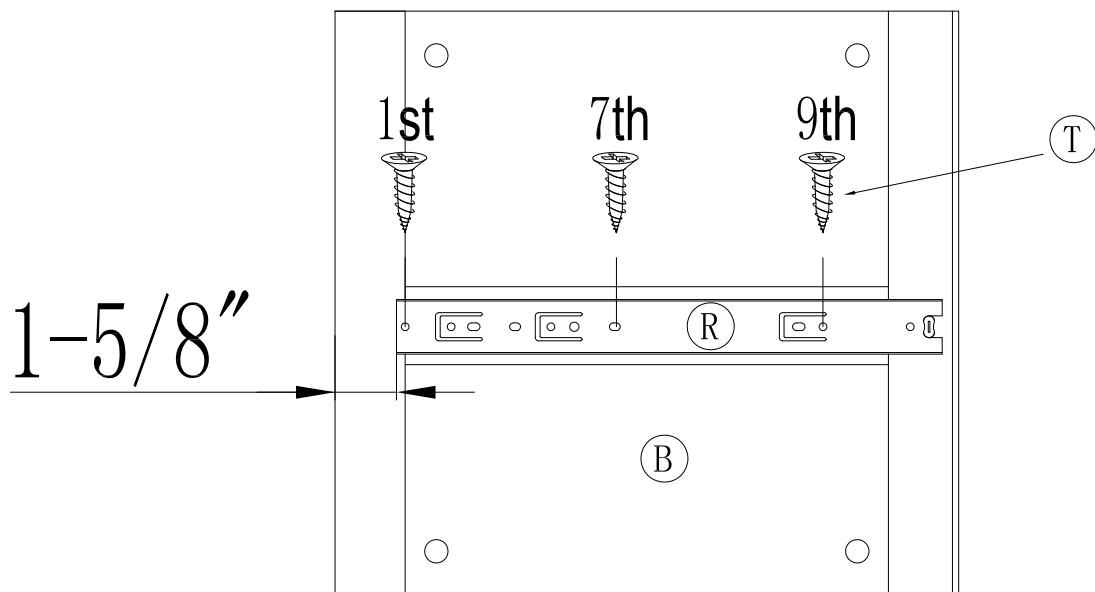NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS




1). ASSEMBLE THE OUTER SLIDERS (R).

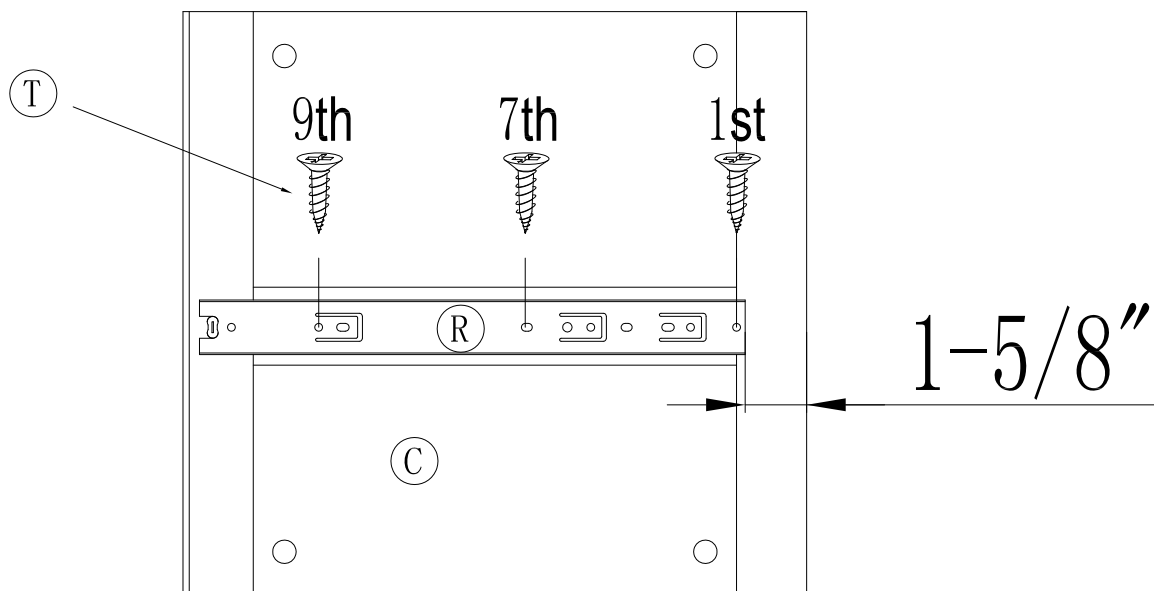- ATTACH THE OUTER SLIDERS (R) TO LEFT SIDE PANEL (B) USING 3 SCREWS (T).




2). ASSEMBLE THE OUTER SLIDERS (R).

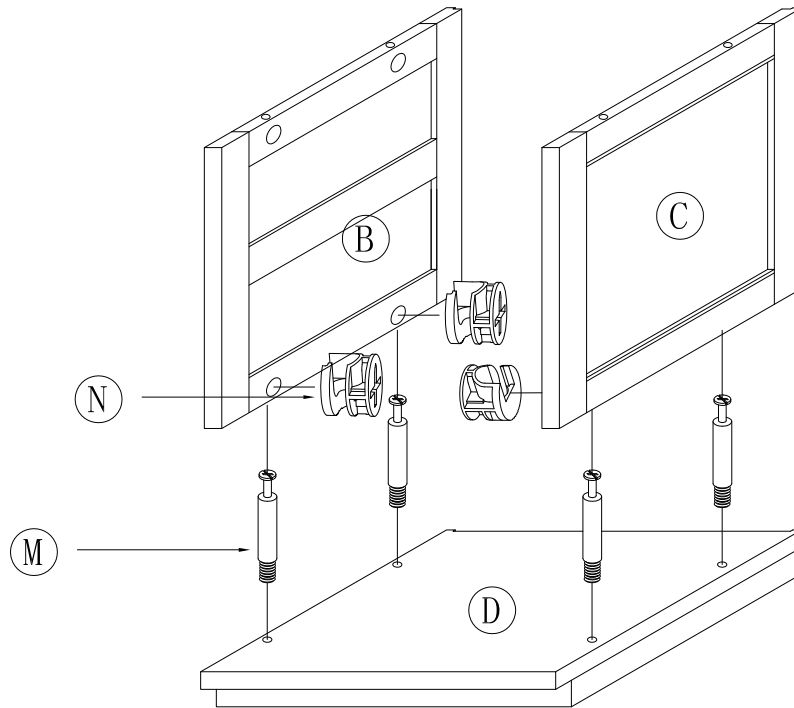- ATTACH THE OUTER SLIDERS (R) TO RIGHT SIDE PANEL (C) USING 3 SCREWS (T).




3). ASSEMBLE THE BOTTOM PANEL (D).

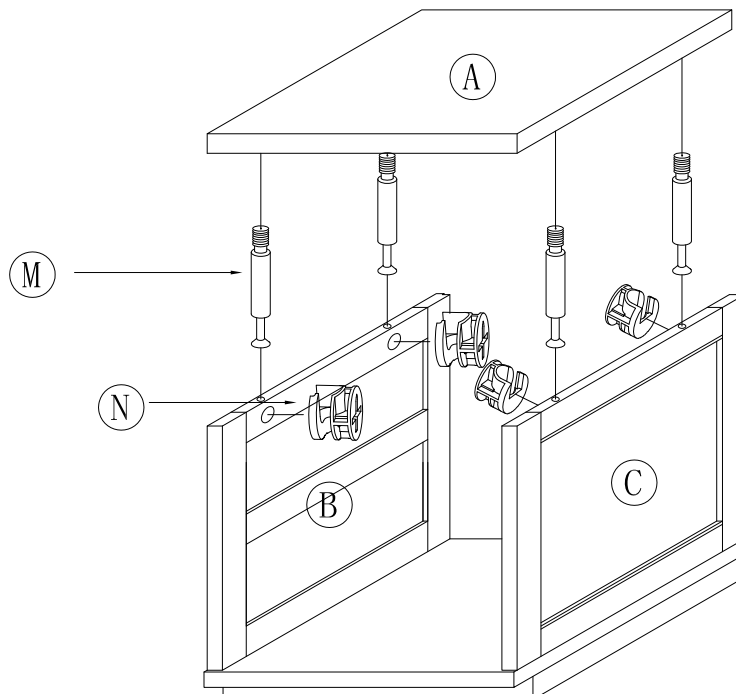- ROTATE 4 CAM-BOLTS (M) INTO THE HOLES IN THE BOTTOM PANEL (D).
- PLACE CAM-BOLTS (M) INTO THE HOLES IN THE SIDE PANEL (B/C) AND ATTACH USING 4 CAM-LOCKS (N).




4). ASSEMBLE THE TOP PANEL (A).

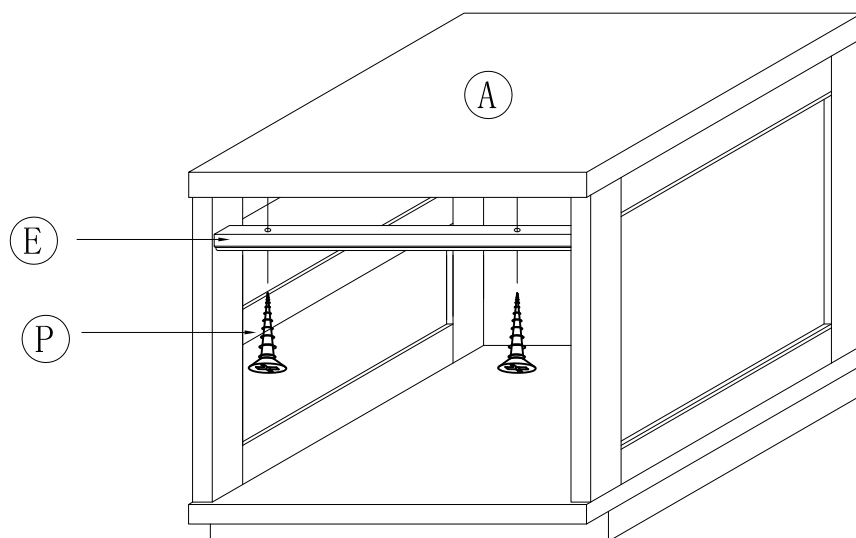- ROTATE 4 CAM-BOLTS (M) INTO THE HOLES IN THE TOP PANEL (A).
- PLACE CAM-BOLTS (M) INTO THE HOLES IN THE SIDE PANEL (B/C) AND ATTACH USING 4 CAM-LOCKS (N).




5). ASSEMBLE THE ADORNING PANEL (E).

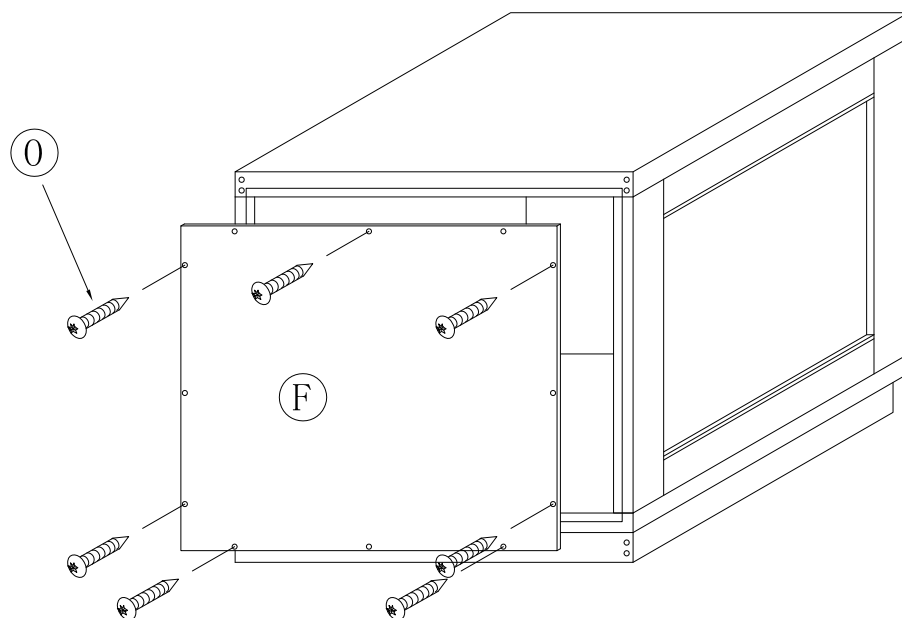- ATTACH THE ADORNING PANEL (E) TO TOP PANEL (A) USING 2 SCREWS (P).



6). ASSEMBLE THE BACK PANEL (F).

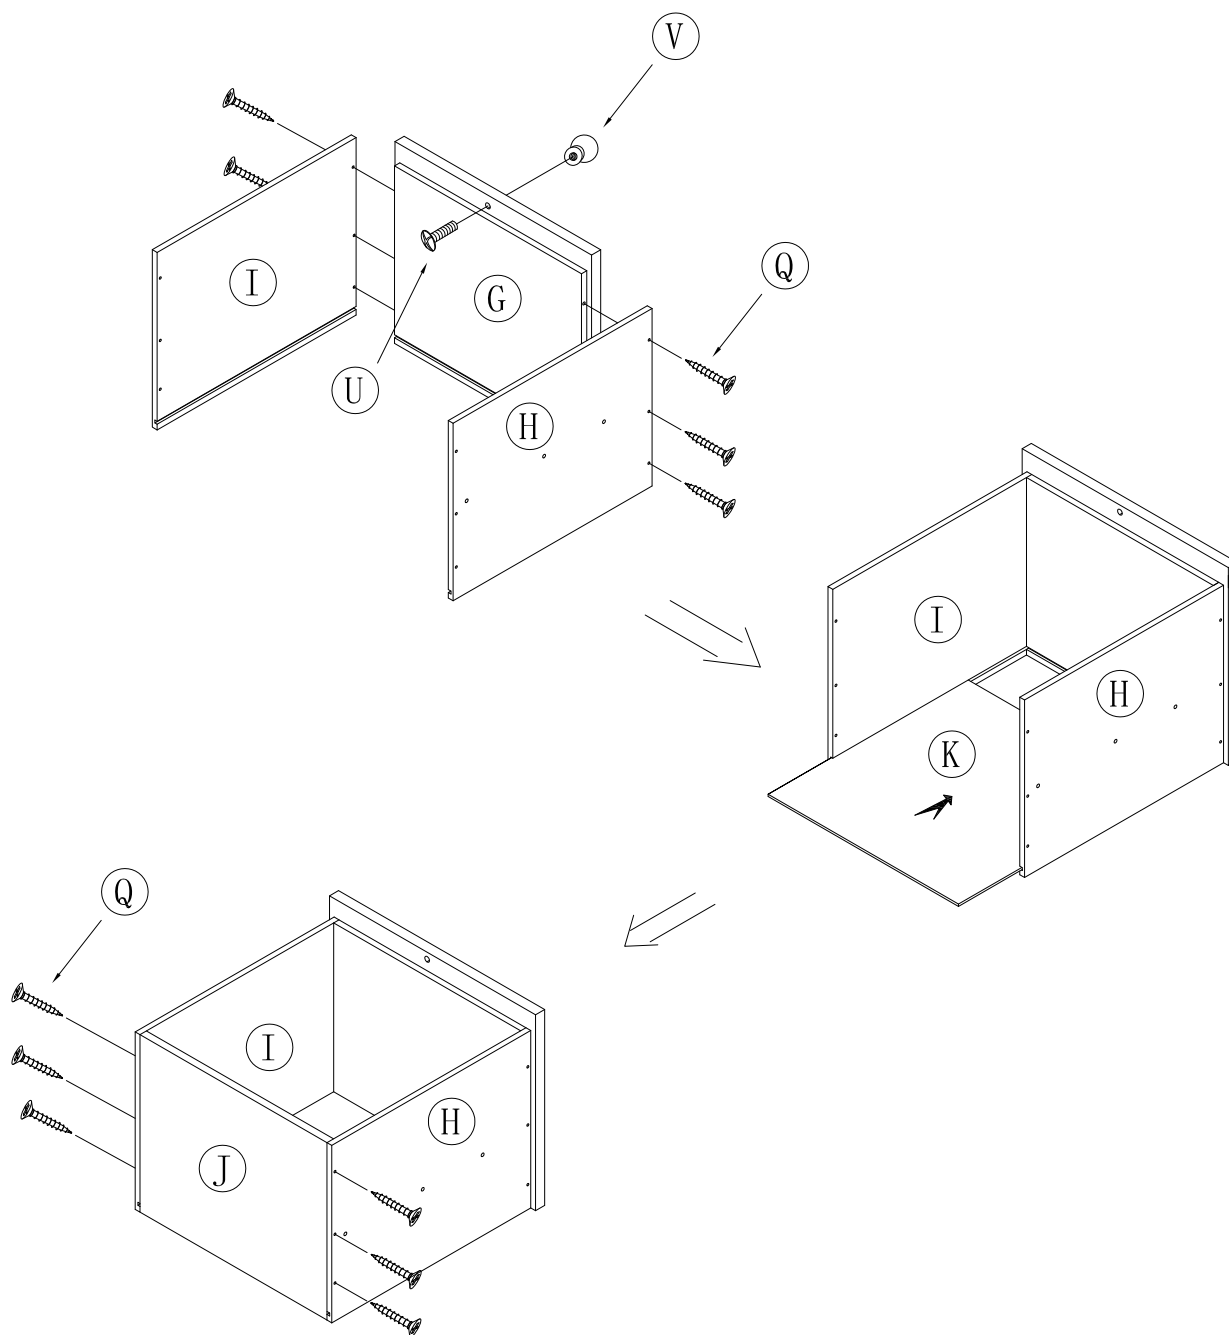- ATTACH THE BACK PANEL (F) USING 12 SCREWS (O).




# 7). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(H/I) USING 6 SCREWS(Q).
- ATTACH THE KNOB(V) TO DRAWER PANEL FRONT(G) USING 1 SCREW(U).
- INSERT THE DRAWER PANEL BOTTOM(K) INTO THE SLOTS IN THE DRAWER PANEL SIDE(H/I).
- ATTACH DRAWER PANEL BACK(J) BETWEEN DRAWER PANEL SIDE(H/I) USING 6 SCREWS(Q).



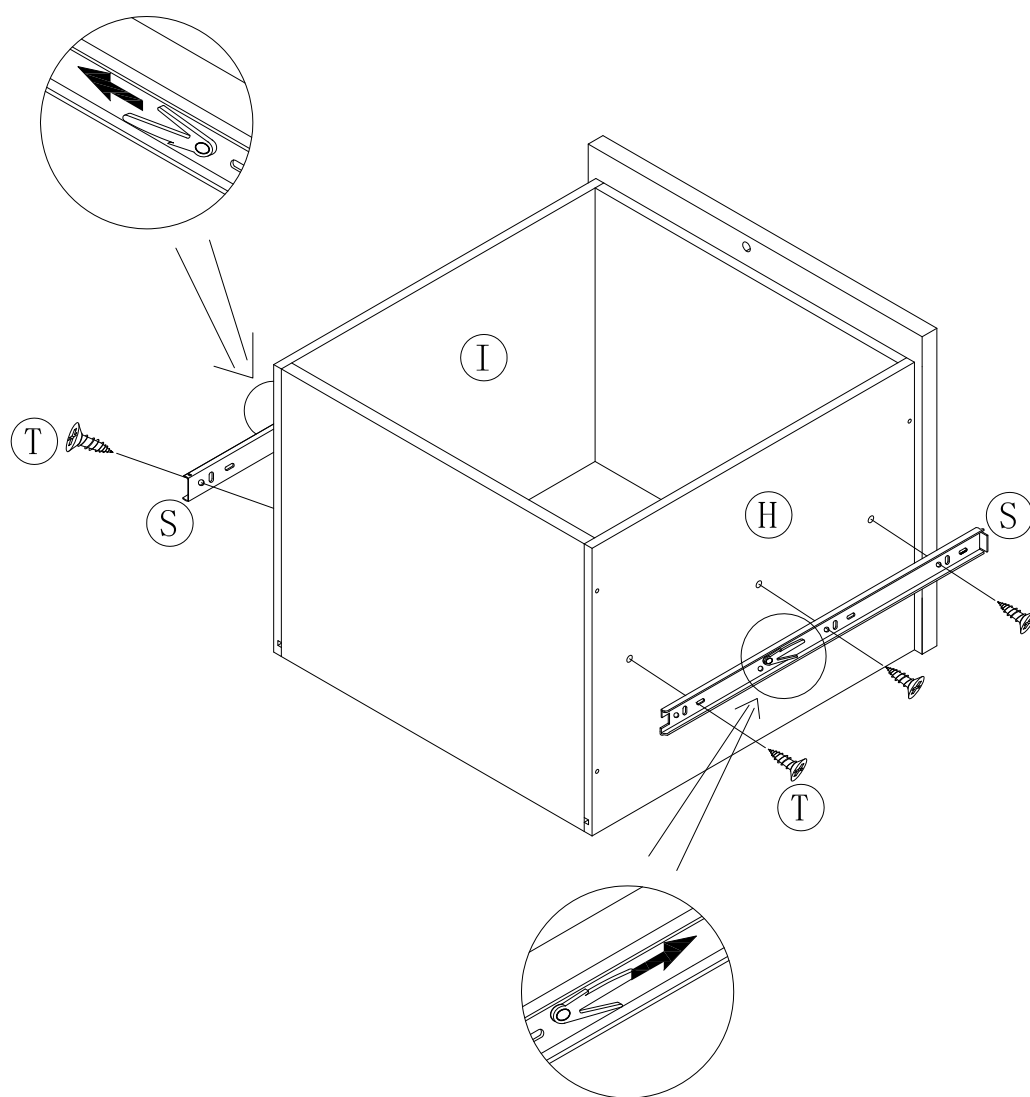
ARROW FACES DRAWER FRONT



ARROW FACES DRAWER FRONT

8). ASSEMBLE THE INNER SLIDERS (S).

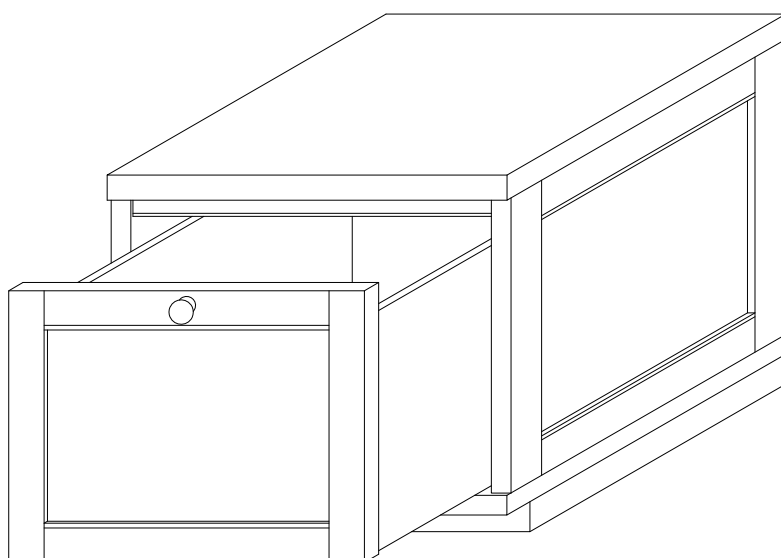- ATTACH THE INNER SLIDERS (S) TO SIDE PANEL (H/I) USING 6 SCREWS (T).



9). ASSEMBLE THE DRAWER.

- INSERT DRAWER INTO THE SLIDERS.